




Gepard GPR^{3D}

Ground Penetrating Radar

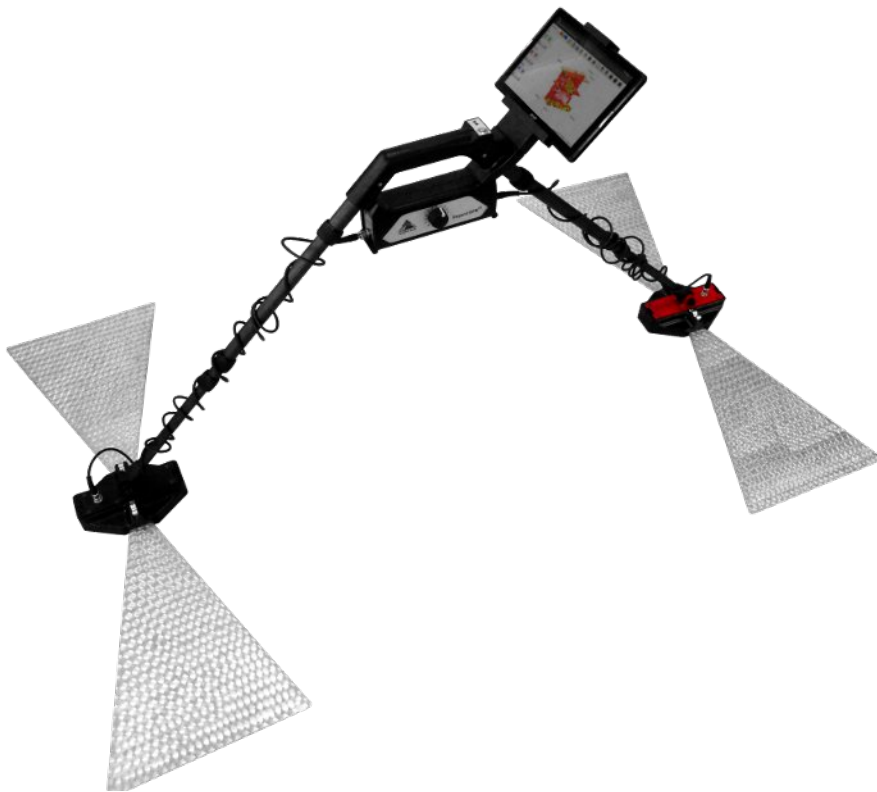

User's Manual

Any information contained in these operating instructions may be changed without prior notice.

OKM does not make any warranty for this document. This also applies without limitation to implied assurances of merchantability and fitness for a specific purpose. OKM does not assume any responsibility for errors in this manual or for any incidental or consequential damage or loss associated with the delivery, exploitation or usage of this material.

This documentation is available "as presented" and without any kind of warranty. In no circumstances OKM takes responsibility for lost profits, usage or data losses, interruption of business activities or all kind of other indirectly damages, which developed because of errors in this documentation. This instruction manual and all other stored media, which are delivered with this package should only be used for this product. Program copies are allowed only for security- and safety purposes. The resale of these programs, in original or changed form, is absolutely forbidden.

This manual may not be copied, duplicated or translated into another language, neither in part nor completely, over the copyright matters without the prior written consent of OKM.

Copyright ©2013 – 2018 OKM GmbH. All rights reserved.

Table of Contents

1 Introduction	7
1.1 Preface	8
1.2 Important Notes	9
1.2.1 General Notes	9
1.2.2 Possible Health Hazards	9
1.2.3 Surrounding Area	9
1.2.4 Voltage	9
1.2.5 Data safety	10
1.3 Maintenance and Services	10
1.4 Danger of Explosion during Excavation	10
2 Technical Specifications	13
2.1 Control Unit	14
2.2 Data Transmission	14
2.3 Triangular antennas	14
3 Scope of Delivery	15
4 Control Elements	17
4.1 Control Unit	18
4.1.1 General overview	18
4.1.2 Transmitter panel	19
4.2 Tablet holder	20
4.3 Triangular Antennas with shafts	20
5 Assembly	22
6 Field procedure	27
6.1 Conducting a field measurement	28
7 Software	31
7.1 New Scan	33
7.1.1 Conducting a measurement in 2D	37
7.1.2 Conducting a measurement in 3D	37
7.2 View Scan	38
7.2.1 Action bar (menu)	38
7.2.2 Applying filters	39
7.2.3 Changing project title and notes	40
7.2.4 Setting field dimensions	41
7.2.5 Viewing a 2D measurement	42
7.2.5.1 Soil Types and Color Schemas	42
7.2.5.2 Toolbar	42
7.2.5.3 Sidebar	43
7.2.5.4 Crosshairs	43
7.2.5.5 Statusbar	43

7.2.5.6 Scrollbar	43
7.2.6 Viewing a 3D measurement	44
7.2.6.1 Soil Types and Color Schemas	44
7.2.6.2 Toolbar	44
7.2.6.3 Sidebar	46
7.2.6.4 Statusbar	46
7.3 Activation	46
8 Appendix & References	49
8.1 Depth Table Calculations	50

Illustration Index

Figure 4.1: Control unit of Gepard GPR	18
Figure 4.2: Charging socket with LED	19
Figure 4.3: Elements of the tablet holder	20
Figure 4.4: Triangular antennas with transmitter, receiver and telescopic shafts	20
Figure 6.1: Holding the Gepard GPR before starting the scan	29
Figure 7.1: Main application menu	32
Figure 7.2: New Scan - Enter project title	33
Figure 7.3: New Scan - Scan Mode	33
Figure 7.4: New Scan - Antenna Selection	34
Figure 7.5: New Scan – Field Dimensions	34
Figure 7.6: New Scan – Apply settings to your Gepard GPR	35
Figure 7.7: New Scan – Single line only (2D) or multiple lines from right to left (3D)	36
Figure 7.8: Conducting a measurement after Bluetooth connection is established	36
Figure 7.9: View Scan – List of measurements	38
Figure 7.10: Filter dialog	39
Figure 7.11: Notes dialog	40
Figure 7.12: Field dimensions dialog	41
Figure 7.13: Overview of 2D screen	42
Figure 7.14: Overview of 3D screen	44
Figure 7.15: Activation – Welcome Screen	47
Figure 7.16: Activation – Entering the serial number	47
Figure 7.17: Activation – Entering the activation code	47
Figure 8.1: Dielectric reference for various soil attenuation	50

CHAPTER 1

Introduction

1.1 Preface

Dear Customer,

all of the engineers, sales, training and support staff at OKM GmbH would like to thank you for your purchase of the Gepard GPR.

The Gepard GPR detector works on the principle of Ground Penetrating Radar (GPR). The radar (**RA**dio **D**etection **A**nd **R**anging) sends a signal into the ground and awaits the reflection of the electrical signal or in common terms an “echo” of the signal to detect sub-surface anomalies. Besides the detection of metallic objects, this device is also capable of detecting natural features of the earth like formations of strata, cavities, voids, faults, and other non-metallic objects. This equipment is best suited at detecting sub-surface anomalies like, sepulchers, buried treasure, buried utilities, tanks and the like.

The Gepard GPR is able to locate, document and analyze buried objects within various soil conditions, structures and vessels non-intrusively without having to excavate the area. Using the GPR is particularly useful in areas where detection is a must and excavation is not possible. The easy and flexible handling of the Gepard GPR can easily and quickly give reproducible results.

With our team of specialists we guarantee that our products are under recurrent control. Our specialists are constantly striving to improve the equipment, performance and understanding of the equipment.

By purchasing or using one of our products, we cannot guarantee that during your research you will be successful and have a find. The recognition of hidden and buried objects depends on a huge number of factors. As you well may know there are different soil types all over the world with different levels of natural attenuation. Variable soil properties can and will hamper and alter ultimate scan measurements. Areas where there is an extreme amount of ground water, varying clays, sands and wet soils making scanning more difficult and may reduce the maximum depth capabilities of any and all detection equipment, regardless of make or model.

For more information regarding where this equipment has been used, operated and tested, please visit our website or contact a sales representative. Our equipment is under constant testing and improvement. With this being mentioned, it is possible for material in this handbook to change without notice.

It is necessary for our company to protect our developments and all the information learned during the “Research and Development” phases in creating our technology. We strive to stay within the given framework of legislation, patents and trademark registration.

Please take the time to read this User Manual and familiarize yourself with the operation, functionality and how to utilize the Gepard GPR. We also offer training for your equipment in our factory and on-site. We strive to maintain a worldwide dealer network for assistance and support. Please visit our web site for more information.

1.2 Important Notes

Prior to using the Gepard GPR and its accessories, please read these operating instructions carefully. These instructions give information on how to use the detector and potential sources where precautions should be taken.

The Gepard GPR and its accessories serve for the analysis, documentation and detection of sub-surface anomalies and ground disturbances. The recorded data of the ground structure will be transmitted to an electronic device like an Android PC to give a visual representation of the anomaly. Using our proprietary software program will assist in visualizing the object.

1.2.1 General Notes

Being an electronic device, the Gepard GPR has to be treated with caution and treated with care as with all other electronic devices. Any failure to observe safety precautions or use of the equipment for purposes other than its intended design may result in damage or destruction of the processing unit and/or its accessories or connected components.

The device has a built in anti-tampering module which will destroy the unit if it is improperly opened. There are no end user serviceable parts on the inside of the unit.

1.2.2 Possible Health Hazards

If used properly this device normally does not pose any health hazards. According to current scientific knowledge, the high-frequency signals are not harmful to the human body on account of their very low power.

1.2.3 Surrounding Area

When moving this unit from a cold place to a warmer place, watch out for condensation. Do not immediately operate the unit until any possible condensation could have evaporated. The unit is not weather proof and water or condensation can destroy the unit.

Avoid strong magnetic fields, which may occur in places where there are large electric motors or unshielded loudspeakers. Try to avoid using this equipment within 50 meters (150 ft) of this type of equipment.

Metallic objects on the ground such as cans, tin, nails, screws or debris can influence your scan data and present negative results regarding your scan data. Also it is a good habit to remove any metallic objects off of your person like cellular telephones, keys, jewelry, etc... Do not wear steel toe boots.

1.2.4 Voltage

Please be aware that the unit is battery powered. Please use only approved batteries and power supplies for this unit.

Never connect or use a 115/230 Volt main AC power supply!

1.2.5 Data safety

Data errors can occur if:

- the range of the sender module has been exceeded,
- the power supply of the device or the batteries are too low,
- the antenna is not extended far enough or extended too far,
- the unit is operating too close to devices which sends out or causes disturbances
- atmospheric conditions (electrical storms, lightning, etc...)

1.3 Maintenance and Services

In this section you will learn how to maintain your measuring instrument with all included accessories to keep it in good condition for a long time and to get receive measuring results.

The following list indicates what you absolutely should avoid:

- penetrating water
- strong dirt, sand and dust deposits
- hard impacts or drops
- strong magnetic fields
- operating within metal enclosures
- continued exposure to high heat

To clean your device please use a dry soft rag or cloth. To avoid any damage you should transport the device and accessories always in the appropriate carrying case(s).

Prior to using your Gepar GPR please be sure that all batteries and accumulators are fully charged.

To charge the external and internal batteries, use only the approved chargers which are part of our scope of delivery.

1.4 Danger of Explosion during Excavation

Unfortunately, the last two world wars and other conflicts have also made the ground in many places of the world a potentially explosive scrap heap. A host of those lethal relics are still buried in the ground. Do not start digging and hacking for an object wildly when you receive a signal of a piece of metal from your device. Firstly, you might indeed cause irreparable damage to a truly rare find, and secondly, there is a chance that the object reacts in an insulted way and strikes back.

Note the color of the ground close to the surface. A red or reddish color of the ground is an indicator of rust traces. As regards the finds themselves, you should definitely pay attention to their shape. Curved or round objects should be a sign of alarm, especially if buttons, rings or little pegs can be identified or felt. The same applies to recognizable ammunition or bullets and shells. Leave that stuff where it is, do

not touch anything and, most importantly, do not take any of it home with you. The killing machines of past wars have made use of diabolical inventions such as rocker fuses, acid fuses and ball fuses. Those components have been rusting away in the course of time, and the slightest movement may cause parts of them to break and be triggered. Even seemingly harmless objects such as cartridges or larger munitions are anything but that. Explosives may have become crystalline over time, that is, sugar-like crystals have formed.

Moving such an object may cause those crystals to produce friction, leading to an explosion. If you come across such relics, mark the place and do not fail to report the find to the police. Such objects always pose a danger to the life of hikers, walkers, farmers, children and animals.

CHAPTER 2

Technical Specifications

The following technical indications are medial values. During operation small variations are quite possible.

2.1 Control Unit

Dimensions (H x W x D)	400 x 180 x 80 mm
Weight (without batteries).....	approx. 1 kg
Voltage	9.6 – 13.2 VDC, 18 W
Operating Time (alkaline batteries, 25 °C)	about 6 hours
Operating Time (accumulator batteries, 25 °C)	about 3 hours
Operating Time (OKM Power Pack 25 °C)	about 10 hours
Operating Temperature	-20 °C to +55 °C
Storage temperature	-25 °C to +60 °C
Air humidity	5 % – 70 %
Battery Charger Module	Internal
External Power Supply	Yes (optional)
Waterproof	No
Multiple Transmission Frequency Range	60 MHz to 300 MHz
Control Display	LED
Multi-Function Control	Yes
Timing/Sampling Adjustments Send/Receive	16 Levels
Complete Cycle Measurements	9 per second

2.2 Data Transmission

Technology	Bluetooth
Transmission Frequency	ISM band from 2400–2480 Mhz

2.3 Triangular antennas

Dimensions	510 x 340 x 50 mm, each
Weight	0.75 kg, each
Shaft Length	540 – 1240 mm

CHAPTER 3

Scope of Delivery

In the following section is a detailed list of all standard equipment shipped with the Gepard GPR. In some instances the contents may vary depending on custom configurations from the customer.




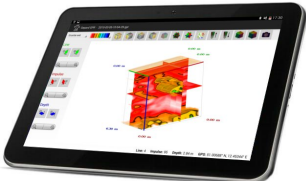

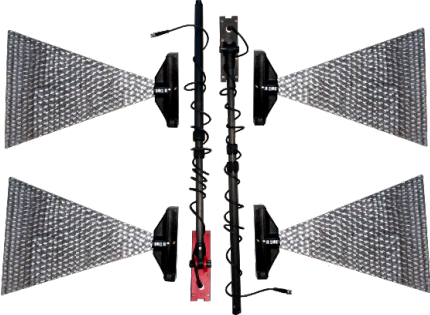
Description	Quantity	Image
Control Unit	1	
Battery Housing (4 x AA (LR6) Battery)	2	
Charger and travel adapter	1	
Android Tablet PC	1	
Android Tablet Holder	1	
User Manual	1	
Water and Shock Resistant Peli Case	1	
Triangular Antennas (including transmitter and receiver)	4	

Table 1: Gepard Packing List

CHAPTER 4

Control Elements

In this section you will learn more about the fundamental use of all control elements for the Gepard GPR measuring instrument. All connections, inputs and outputs are explained in detail.

4.1 Control Unit

The control unit is the processing center of the Gepard GPR. It's collecting data from the underground and sending it to an Android Tablet PC, where a graphical representation of underground anomalies is shown.

4.1.1 General overview

Figure 4.1 shows all important parts of the control unit.

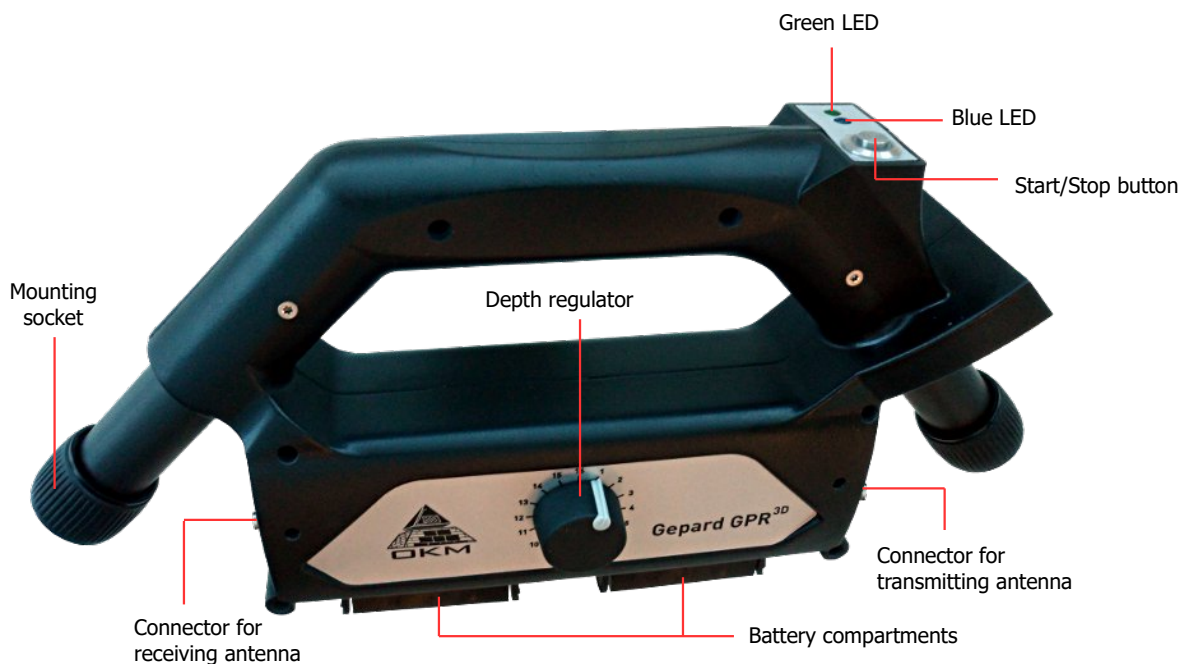


Figure 4.1: Control unit of Gepard GPR

Start/Stop button: This button is the main control for turning on the unit, starting and stopping measurements as well as turning off the unit. To turn on the Gepard GPR, simply press the start/stop button one time. To turn off the Gepard GPR, press and hold the start/stop button for at least 3 seconds. When the green LED turns off, you can release the start/stop button.

Green LED: The green LED indicates the sampling status of the device. As soon as sampling starts it will also start to blink. If sampling stops it will shine permanently.

Blue LED: The blue LED indicates the Bluetooth connection between control unit and Tablet PC.

The unit will turn on and as a test all LEDs will illuminate for approximately 3 seconds, then will turn off for internal testing for the next 5 seconds. Do not press the start/stop button during this startup period. The device is ready for operation as soon as the green LED is illuminated again.

Depth regulator: The depth regulator is used to adjust the maximum depth penetration. While setting up a measurement in the Android Application, you will also select a proper depth value. The application will inform you about the correct depth regulator setting afterwards (a value between 1 and 16).

Battery compartments: The control unit is powered with 8 AA size (LR6; NiMH or Lithium) rechargeable or alkaline batteries by default. Inside of the housings, the battery orientation is shown.

When using disposable batteries, do not use Zinc Carbon (Zink-Braunstein) batteries to power the control unit.

Connectors for antennas: These connectors are used to connect the cables of the antennas. Always make sure to connect receiver antenna to receiver port and transmitter antenna to transmitter port (red front panel).

Mounting sockets: The mounting sockets are used to fix transmitter and receiver shafts into place. There are magnets on the ends of the shafts as well as inside the mounting sockets that will attract each other.

4.1.2 Transmitter panel

The Gepard GPR can be operated from either internal or external batteries. The optional OKM Power Pack can also power the unit. This external power pack, when connected, can operate the unit and charge internal rechargeable batteries. In figure 4.2 is shown where to connect the battery charger or the external power supply.

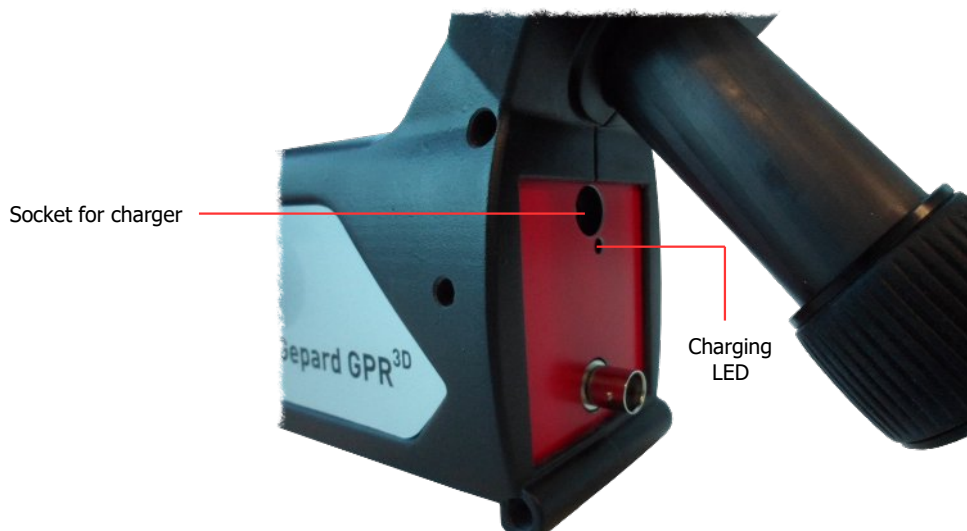


Figure 4.2: Charging socket with LED

Socket for Charger: Here you can plug in the charger or – if available – the external Power Pack. Keep attention when pushing the plug into the socket!

Charging LED: When there are internal rechargeable batteries the Charging LED will illuminate. In case the internal batteries are not rechargeable, the unit will recognize this and not put any charge to the batteries.

4.2 Tablet holder

The tablet holder is used to mount a Tablet PC on top of the Gepard GPR.

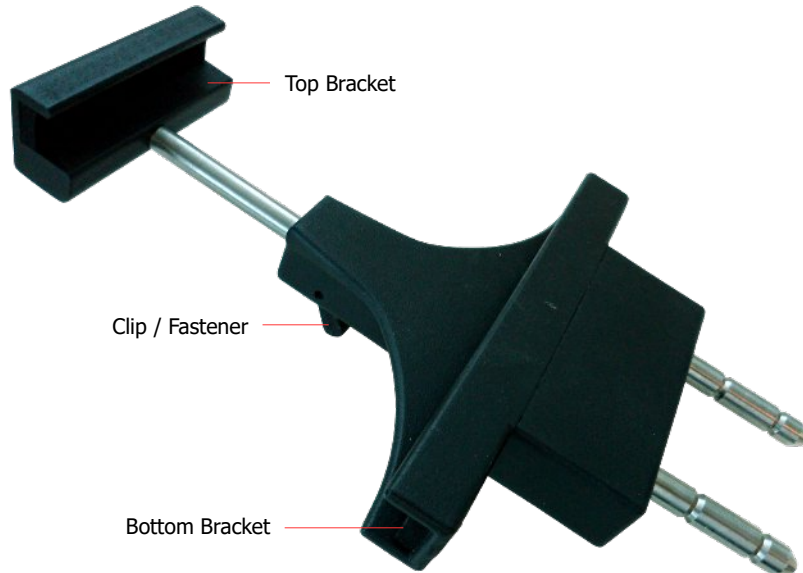


Figure 4.3: Elements of the tablet holder

Clip/Fastener: Use this clip to loosen or tighten the top bracket of the Table Holder. This bracket will push the Tablet PC into the bottom bracket to keep it in place. As soon as the Tablet PC is fixed between the brackets lock the clip.

Top Bracket / Bottom Bracket: These two brackets keep the Tablet PC in place after tighten the clip.

4.3 Triangular Antennas with shafts

The triangular antennas come with a set of transmitter (red) and receiver (black) shafts as well as two cables.

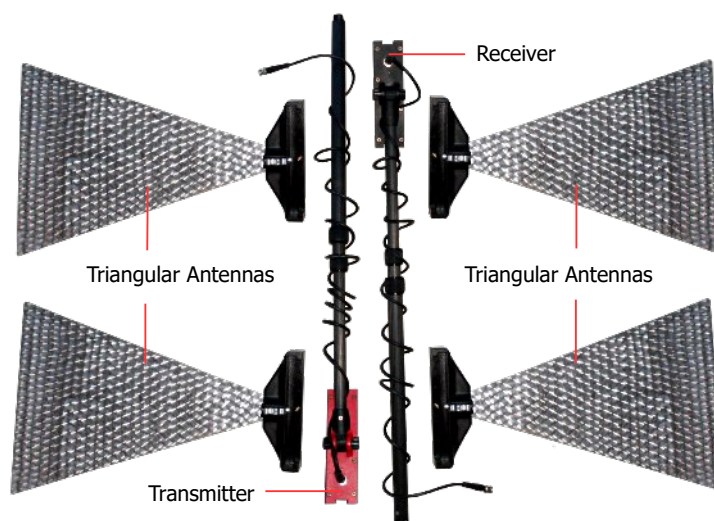


Figure 4.4: Triangular antennas with transmitter, receiver and telescopic shafts

Triangular antennas: These antennas make it possible to release signals in the range of 60 MHz to 300 MHz into the underground soil and receive back its echos.

Transmitter (red): The transmitter is generating signals that will be send into the underground.

Receiver (black): The receiver collects all echos and reflections from the antennas to calculate potential anomalies that might exist in the underground soil.

CHAPTER 5

Assembly

This section explains how to assemble the Gepard GPR and to prepare the unit for operation.


Preparing the Gepard GPR for use is very simple. After inspecting all of the components and ensuring that all parts are present, assembly can begin.



Remove the battery housings from the control unit and insert 8 AA size (LR6; NiMH or Lithium) rechargeable or alkaline batteries. Inside of the housings, the battery orientation is shown.



Insert the battery housings back into the main unit and push in until they lock into place.

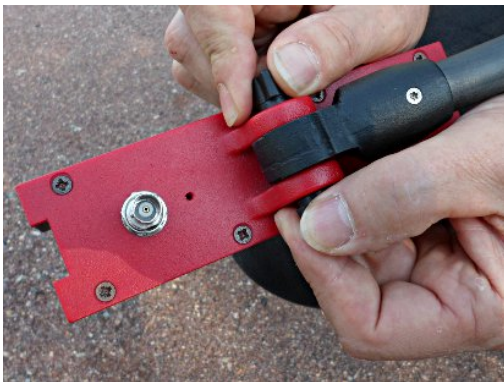

Mount the telescopic shafts to transmitter (red) and receiver (black).



Then connect the BNC connectors to transmitter (red) and receiver (black). Line up the tabs and turn clockwise to tighten and counter-clockwise to loosen.



Now push the transmitter and receiver shafts into the mounting sockets of the control unit. First push the shaft into the mounting socket ...




... and then slightly turn the shaft forth and back until it locks into place (gets attracted by the magnets).

Please check that all red indicated parts belong to each other. So the transmitter (red) needs to be connected to the red front panel of the Gepard GPR.




Connect the BNC connectors to the control unit. Line up the tabs and turn clockwise to tighten and counter-clockwise to loosen.

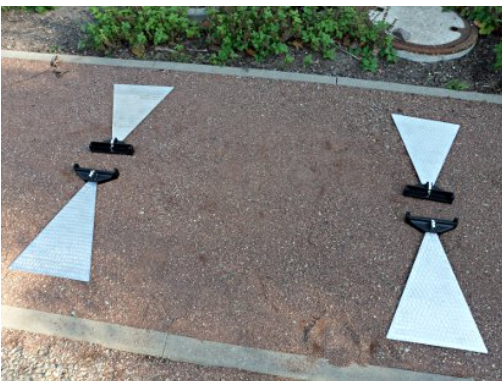


Placing all triangular antennas on the floor makes it easier to mount the antennas onto the transmitter and receiver.



Pull back the metal lock and simply push the transmitter or receiver head over the triangular antenna.

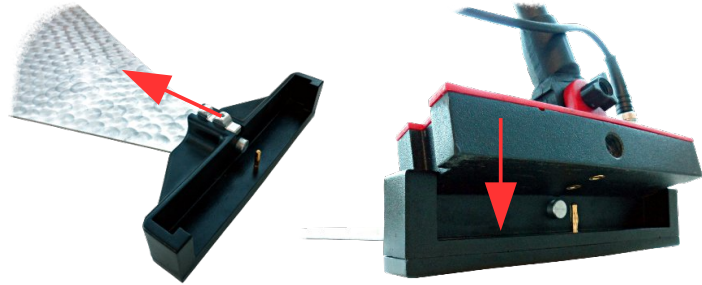

You can now adjust the length of the shafts according to your body height. Simply unlock the segments, change the length and lock it back into place. **DO NOT use the top lock (it is not functional).**

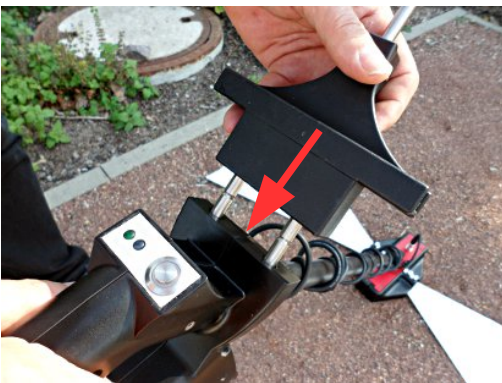

Push the holder for Tablet PC into the front holes. To remove it, simply lift off.



Now insert the Android Tablet PC between top and bottom bracket of the tablet holder ...



... and fix it by using the clip/fastener. Push the clip upwards and synchronously push the top bracket downwards to fasten the Tablet PC.



Now you are ready to power on the Gepard GPR and start your first measurement.

CHAPTER 6

Field procedure

This chapter gives practical instructions about the general procedure of scanning an area. The different scanning methods and procedures will be explained in detail.

The Gepard GPR from the original conception has the design of ease and simplicity allowing for the use and operation of the unit without needing an extensive amount of training or schooling.

For the use and operation of the Gepard GPR, there are several factors to take into consideration. The operation of the unit is simple and using the following rules will give good consistent data:

1. During a measurement it is important to keep the transmitting antenna and the receiving antenna at the same height above the ground.
2. Do not change the height during a measurement. Usually the distance should be as close to the ground as possible but in case of obstacles you have to use a bigger distance which must be maintained during the complete scan.
3. Do not swing the GPR from the left to the right. Keep the unit steady and in the direction that you would like to scan.
4. Move the GPR at a consistent speed, even though it can scan using the GPS coordinates, moving the unit at the same speed helps in locating your target easier.
5. If a suspected target is detected, repeat the scan. With any detection device, repeating the detectable object will increase your accuracy.

The ground, this is going to be your biggest challenge. Though the unit can detect items to depths of approx. 40 meters, please consider the fact that with so many varying soil types and combinations, there are some locations where maximum depths will be considerably less.

In the Android Tablet PC, the software has been simplified requiring only a couple of steps prior to beginning a measurement. In the software section on page 31, we will explain in detail how to begin a measurement.


Conducting measurements is quite simple. Knowing your starting position and stopping position of every scan and keeping the scan lines straight will help to localize sub-surface targets. Enabling the GPS in your Tablet PC will aid in the localization and assist in retracing the path taken. The GPS does not transmit data, it only receives data and is available in most parts of the planet.

Keeping notes of the measured area are very important. Notes can be written directly into the file (see section "7.2.3 Changing project title and notes" on page 40).

6.1 Conducting a field measurement

While configuring your measurement with the Tablet's 3d application you may choose between two different scan modes:


2D Scan

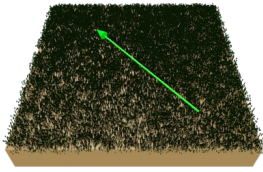

This scan mode is used to scan just one straight single line over your scan field. So this is very useful to precheck your area for potential anomalies like pipelines or tunnels.

If the underground object is very large in horizontal dimension you will see an anomaly by just passing over it one time.

3D Scan

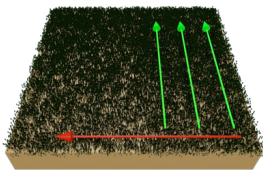

While using the 3D scan mode you have to scan more than just one single line. You will scan your first straight line and then step to the left side to scan another line. Simply repeat this procedure several times to collect data of a complete scan area.

In this way you will be able to determine several underground objects in just one measurement.

After setting up your software application go to the start point of your first scan line and make sure the antennas have the same distance to the surface as shown in figure 6.1.



Figure 6.1: Holding the Gepard GPR before starting the scan

More information about setting up the measurement and how to start or stop your lines you will learn in sections "7.1.1 Conducting a measurement in 2D" and "7.1.2 Conducting a measurement in 3D" starting on page 37.

CHAPTER 7

Software

The Gepard GPR software is fully explained. How to work the various features and conduct the data analysis.

After starting the Gepard GPR application you will see the main application menu as shown in figure 7.1.

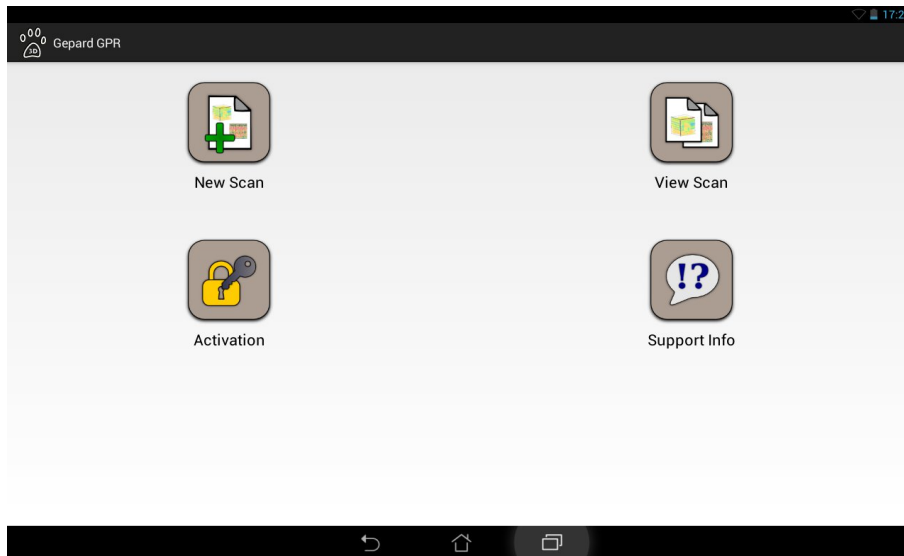


Figure 7.1: Main application menu

In the main menu you can select following options:

- **New Scan**
Select this option if you want to create a new measurement whether in 2D or 3D.
- **View Scan**
All your measurements are stored automatically on the Tablet PC. Using this option you will be able to select certain scans for detailed evaluation.
- **Activation**
Before using the Gepard GPR for the first time you need to activate your device. The process of activation starts by selecting this option.
- **Support Info**
If you need to contact the manufacturer for help you may use this option.

7.1 New Scan

After selecting this operating mode from the main menu you have to follow several screens to set up your application according to your specific task.

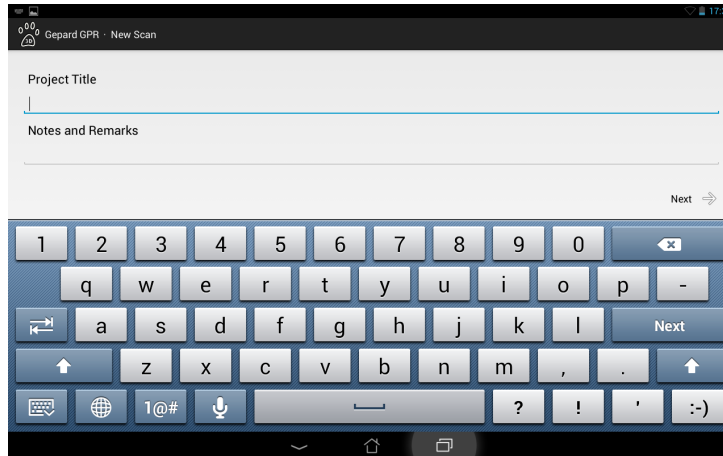


Figure 7.2: New Scan - Enter project title

In the first screen from figure 7.2 you must enter a project title, which is later on used to find your measurement from the list of all recorded files (see section 7.2 on page 38).

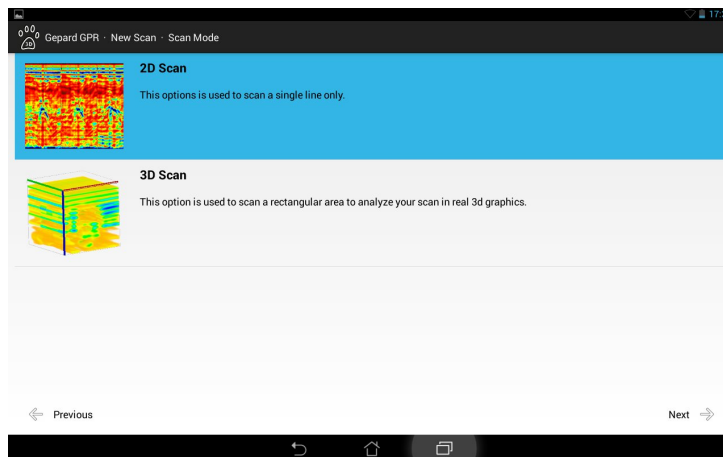


Figure 7.3: New Scan - Scan Mode

During the next step you have to select the type of measurement. You have 2 choices:

- **2D Scan**
The 2D scan is used to scan a single line only. You will just see the reflections of underground objects in simple 2D graphics.
- **3D Scan**
The 3D scan is used to scan many parallel lines to get a real 3D image of the underground objects.

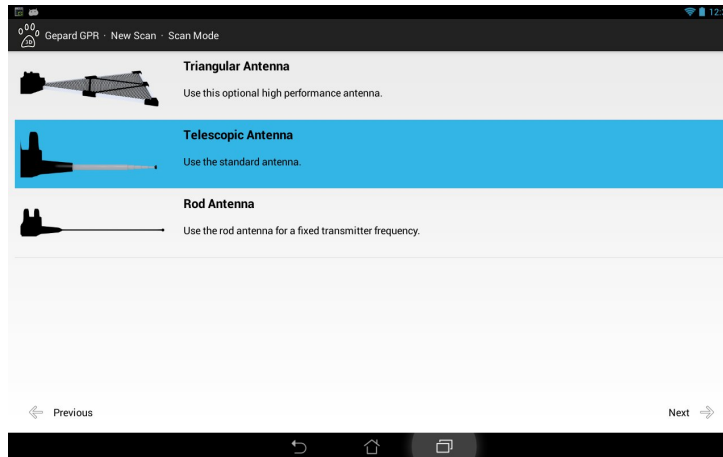


Figure 7.4: New Scan - Antenna Selection

After selecting the scan mode you have to select one of the available antennas. According to figure 7.4 you may select one of the following options:

- **Triangular Antenna**
Use this option if you have connected the triangular antennas.
- **Telescopic Antenna**
This option is available for compatible mode. Use this option if you have connected the older telescopic antennas.
- **Rod Antenna**
This option is available for compatible mode. Use this option if you have connected the older rod antennas.

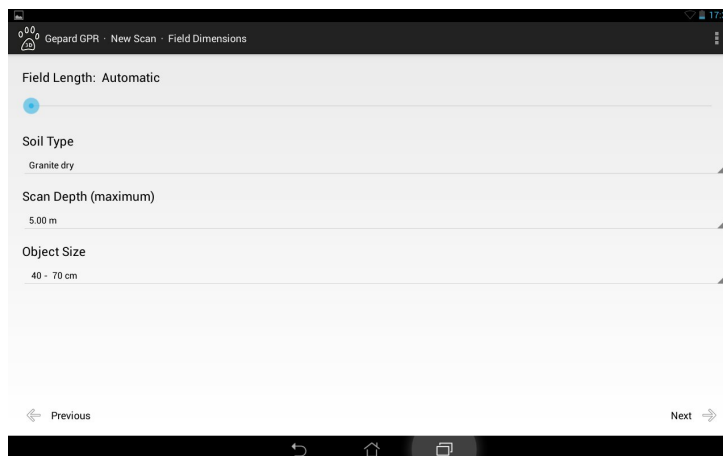


Figure 7.5: New Scan – Field Dimensions

During the next step, shown in figure 7.5, you will adjust some settings concerning the scan field itself:

- **Field Length**
Here you adjust the length of a single scan line. For a 3D scan each single scan line has the same length. If "Automatic" is selected the final length of the line is determined during the scan of the first line of a measurement.

- **Soil Type**

Selecting the correct soil type will make the depth measurements of the Gepard GPR very close to actual. Due to the fact that there are literally millions of various combinations of soils, getting the exact one will not always be possible.

Various soil types will have different attenuation factors. Soil magnetic permeability (detailed table located on page 50) is the ability for electrical signals to travel through different media. As a geological note, allows the radar wave to travel through the earth and return with an echo.

One of the best ways to determine the proper soil type in an area is to conduct a measurement over a known buried object at a known depth. Conduct the scan and then compare the soil type to the depth of the object. This is a quick and easy method to determine the best soil for the area.

- **Maximum Depth**

The indicated depth will be the maximum depth to which the Gepard GPR is measuring into the underground (according to your selected soil type). The smaller the depth the better the resolution of objects that are closer to the surface. For greater depths the resolution will decrease. It is essential that the proper soil type has been selected before.

In case you have selected the telescopic antennas you will have one more option to adjust:

- **Object Size**

According to the object size you have to adjust your telescopic antennas. This is some helper function to make it easier for you to extend your telescopic antennas in the right way.

After all the previous steps has been processed successfully you will see the screen from figure 7.6.

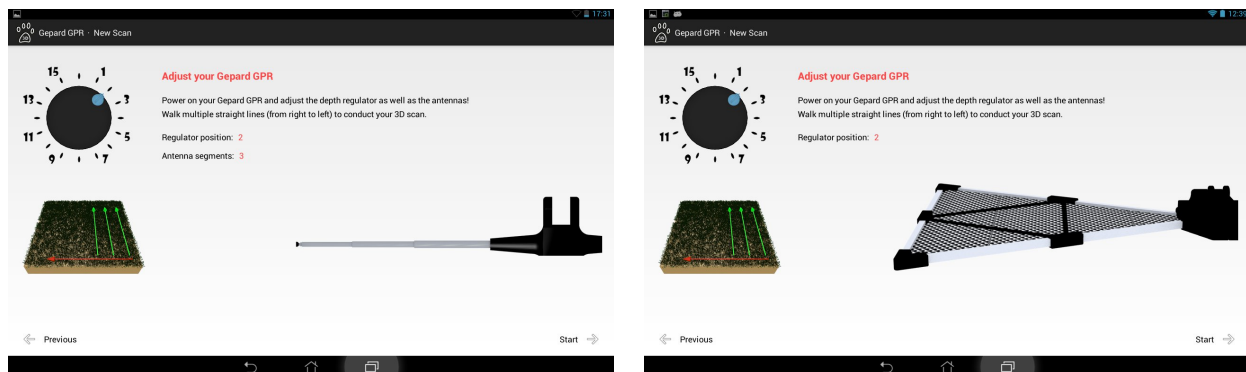


Figure 7.6: New Scan – Apply settings to your Gepard GPR

Depending on your settings you will see how to prepare your Gepard GPR for the upcoming measurement:

- **Regulator position**

This value indicates on which position you have to adjust the depth regulator of your Gepard GPR. Additionally you will see a figure of the correct adjustment.

- **Antenna segments**

This value indicates how many segments of your telescopic antenna should be extended.

Additionally you will see a figure of the correct adjustment. This information is not available if you have selected the triangular or rod antenna.

Another information that you can find on this screen is how to walk the scan field. Just a straight single line for 2D scans (figure 7.7 left) or multiple straight lines next to each other starting from right to left for 3D scans (figure 7.7 right).

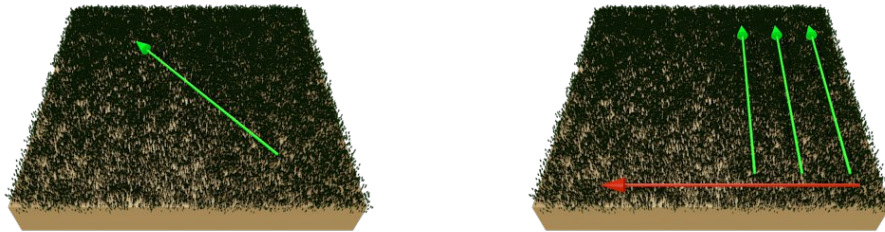


Figure 7.7: New Scan – Single line only (2D) or multiple lines from right to left (3D)

Before tapping on "Start" you have to power on your Gepard GPR and prepare your depth regulator as well as the antennas if necessary.

After tapping on "Start" you will see the screen from figure 7.8. Now the application establishes a Bluetooth connection between Tablet PC and Gepard GPR. If the connection has been established properly the Gepard GPR's orange LED switches on.

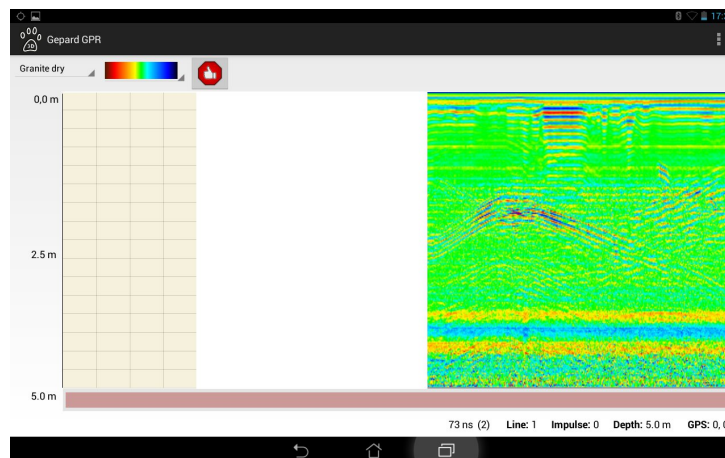


Figure 7.8: Conducting a measurement after Bluetooth connection is established

According to the selected scan mode you can now conduct your measurement.

7.1.1 Conducting a measurement in 2D

For a simple 2D scan you just have to walk a single but straight line.

Go to your start point, the antennas should be 10 cm above the ground, and push the start/stop button on your Gepard GPR. Then keep walking slowly and continuously to the end point of your scan line. As soon as you reach the end point push the button again to stop the scan.

During this process you should see the data appearing on the screen of your Tablet PC.

Tap this button to finish the 2D scan and answer the upcoming message with "Yes".

7.1.2 Conducting a measurement in 3D

For a 3D scan you have to walk multiple straight lines while starting on the right side of your scan field. Each additional scan line is made left to the previous one.

Go to your start point, the antennas should be 10 cm above the ground, and push the start/stop button on your Gepard GPR. Then keep walking slowly and continuously to the end point of your scan line.

Depending on your selection of the field length one of the following actions is necessary:

Field Length = Automatic

As soon as you reach the end point of the first scan line push the button again to stop the line.

By that you also set the final length of each following scan line.

Field Length \neq Automatic

After reading enough values the Gepard GPR will stop automatically.

Now go back to the start point of your first scan line and step to the left. Repeat scanning the next line by pushing the start/stop button. From now on the Gepard GPR will stop automatically at the end of the line.

Repeat the process for as many lines as necessary to complete your whole scan.

Tap this button to finish the 3D scan and answer the upcoming message with "Yes".

7.2 View Scan

After conducting several measurements you can open and evaluate your scans in more detail. Therefore you select the option "View Scan" from the main menu. Now you can see a list of available measurements as shown in figure 7.9.

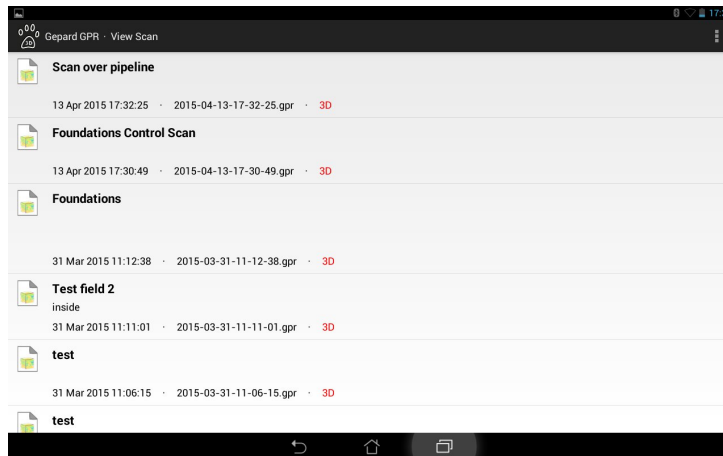


Figure 7.9: View Scan – List of measurements

Tapping on one of the entries will just open the measurement. Tapping and holding for a longer while a popup list will appear with further actions:

- **View**
This option will open the measurement in the scan mode it was recorded in. So 2D scans will be shown in 2D and 3D scans will be shown in 3D.
- **View in 2D**
This option is only useful for 3D scans. So 3D scans will be shown in 2D only by just adding the single scan lines one after another.
- **Delete**
Use this option to delete the file from the memory. After deleting the file the scan is not recoverable.

7.2.1 Action bar (menu)

Depending on the model of your Tablet PC there are two ways to popup the action bar or menu:

1. Your Tablet PC is equipped with a real hardware menu button (symbolized by a bended arrow at the bottom frame of your tablet) that you can tap to open the menu.
2. Your Tablet PC has no hardware menu button but a software action bar (symbolized by three square dots at the top action bar) to open the menu.

No matter how you are opening the menu, you will see following items:

- **Filter ...**
This option can be used to change the applied filter settings. This is only recommended for professional users. Changing the settings can result in wrong data display.
- **Notes ...**
Use this option to change the project title and add additional remarks to your measurement.
- **Field Dimensions ...**
This option is used to enter the correct field dimensions of your measurement.
- **Meters**
Select this option to change all units into meters (m).
- **Feet**
Select this option to change all units into feet (ft).

The last two options (Meters, Feet) are available throughout the complete Gepard GPR application. So you can change the unit system at any time where necessary.

The first three options will be explained in more detail in the following sections.

7.2.2 Applying filters

After opening a 3D measurement the default filter is applied automatically to improve the visual representation of your recorded data. For all 2D measurements no filter is applied at the beginning, but you can do so manually if necessary.

To apply the filters or change the settings accordingly you need to open the menu and select the option "Filter ...". Then the dialog from figure 7.10 appears on screen.

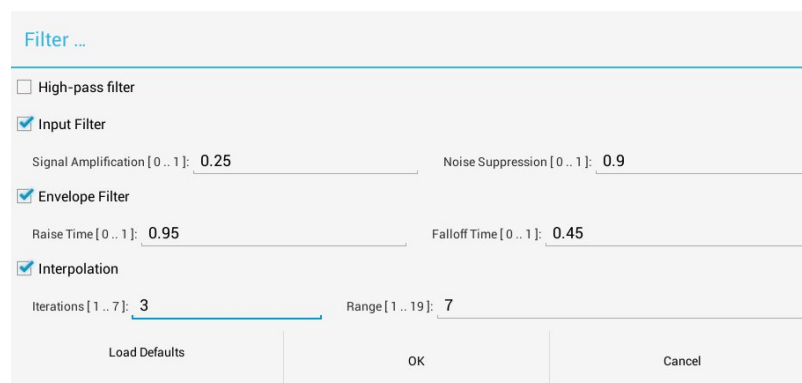


Figure 7.10: Filter dialog

The following settings are available:

- **High-Pass Filter**
The High-pass filter is used to remove lower frequencies that may disturb your measurement. So your preferred frequencies will stay in place to indicate underground anomalies.

- **Input Filter**

The input filter is used to improve the incoming data with better contrast and to remove noisy background signals. Therefore two values can be adjusted:

- **Signal Amplification**

Enter a value from 0 to 1 to amplify the incoming signals by 0% to 100%.

- **Noise Suppression**

Enter a value from 0 to 1 to reduce the background by 0% to 100%.

- **Envelope Filter**

The envelope filter takes a high-frequency signal as input and provides an output which is the envelope of the original signal. Therefore two values can be adjusted:

- **Raise Time**

Enter a value from 0 to 1 to set the increasing speed of the envelope.

- **Falloff Time**

Enter a value from 0 to 1 to set the decreasing speed of the envelope.

- **Interpolation**

The interpolation collects nearby data to form groups of potential structures. Therefore two values can be adjusted:

- **Iterations**

Enter a value from 1 to 7 to define how often the interpolation process should be executed over the measurement. The more cycles you run the smoother the result but you may lose small single objects.

- **Range**

Enter a value from 1 to 19 to set the range or distance of neighbour values that should be part of the interpolation process.

Depending on the selected checkmarks more or less filters can be applied to your measurement.

7.2.3 Changing project title and notes

Before you create a new measurement you have to enter a meaningful project title. Without entering a title you cannot conduct a measurement. You may change this project title and your additional remarks afterwards, e.g. to add some more important information or to precise the current title.


The image shows a software dialog box titled "Notes". It contains a "Project Title" label and a text input field with the text "Scan over pipeline". Below this is a "Notes and Remarks" label and a larger text input area. At the bottom of the dialog, there are two buttons: "OK" on the left and "Cancel" on the right.

Figure 7.11: Notes dialog

To open the dialog from figure 7.11 you have to select the option "Notes ..." from the popup menu.

7.2.4 Setting field dimensions

If you want to measure the position of possible targets you must enter the correct field dimensions of your scan area. In the popup menu you have to select the option "Field Dimensions ...". Then the dialog from figure 7.12 appears on screen.

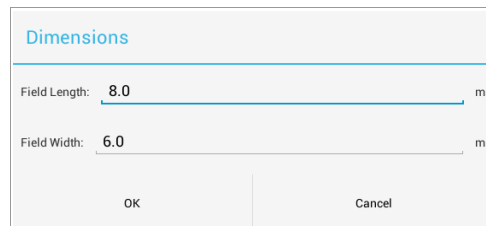

The image shows a dialog box titled "Dimensions". It has two input fields: "Field Length" with a value of 8.0 and "Field Width" with a value of 6.0. Both fields have a unit "m" to their right. At the bottom, there are two buttons: "OK" and "Cancel".

Figure 7.12: Field dimensions dialog

Now enter the following information:

- **Field Length**
This is the length of a single scan line, no matter if you conducted a scan in 2D or 3D.
- **Field Width**
This is only useful for 3D scans and indicates the distance between first and last scan line.

To find the correct position on your scan field you have to place the position markers over the detected object.

7.2.5 Viewing a 2D measurement

In figure 7.13 you see a breakdown of the 2D screen.

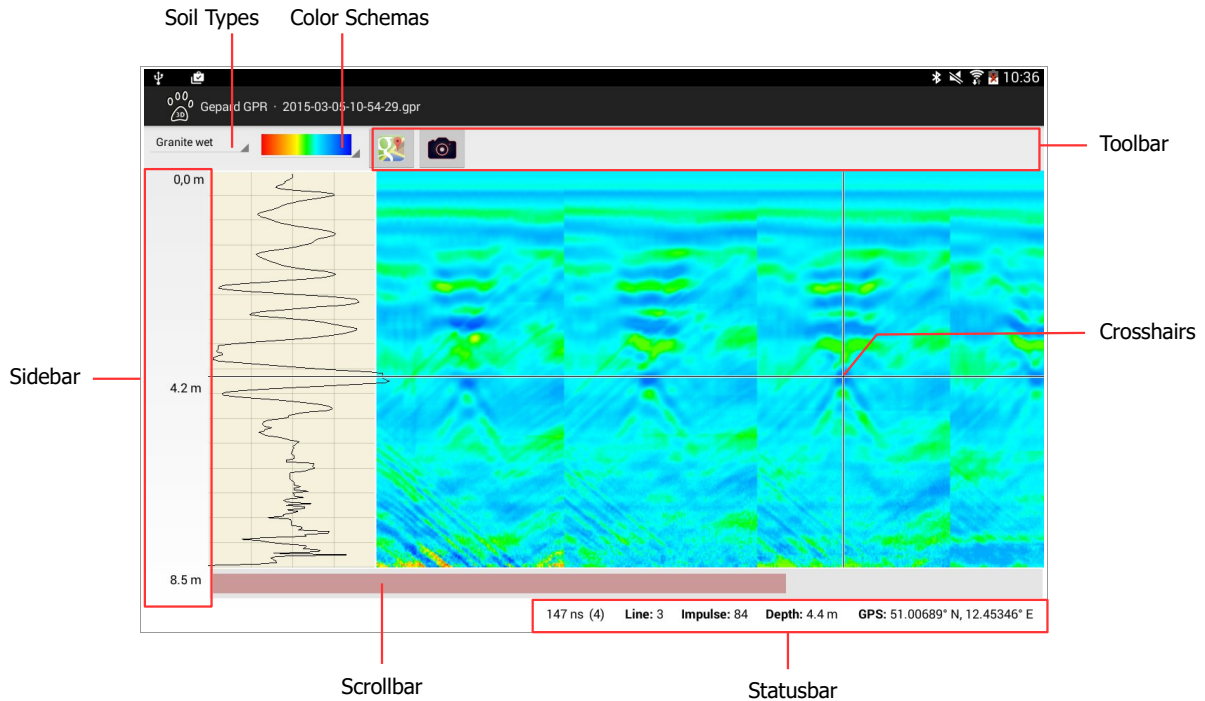


Figure 7.13: Overview of 2D screen

Next to the main viewing area there are some elements to control the rendering of the measurement.

7.2.5.1 Soil Types and Color Schemas

By selecting the correct soil type of your scan area you will get better results concerning the depth measurement. It does not change any visual representation of your graphic.

Switching between different color schemas can sometimes reveal hidden structures because of different contrast and brightness settings. So there is no recommended color schema to use, you always have to find the best solution by yourself.

7.2.5.2 Toolbar

The toolbar is home of several buttons which are explained here:



Google Maps

Open a map to see where your current scan was conducted.



Screenshot

In case you want to save your current view into an image file simply use this button to create a screenshot of your screen.

7.2.5.3 Sidebar

The sidebar just represents a depth chart to quickly check the approximate depth of potential objects and structures. If you would like to get a more specific depth measurement you have to use the crosshairs.

7.2.5.4 Crosshairs

To read the depth as well as the position of detected objects you just need to move your finger over the main viewing area to place your crosshairs directly over the potential object. Then you can read the depth and position value in the statusbar of the screen.

7.2.5.5 Statusbar

The information from the statusbar are mostly based on the position of the crosshairs. So by changing the crosshairs, the values in the statusbar will also change.

7.2.5.6 Scrollbar

If the visual representation of your measurement is too large to fit on your screen, you may use the scrollbar to move the graphic left or right.

7.2.6 Viewing a 3D measurement

In figure Fehler: Referenz nicht gefunden you see a breakdown of the 3D screen.

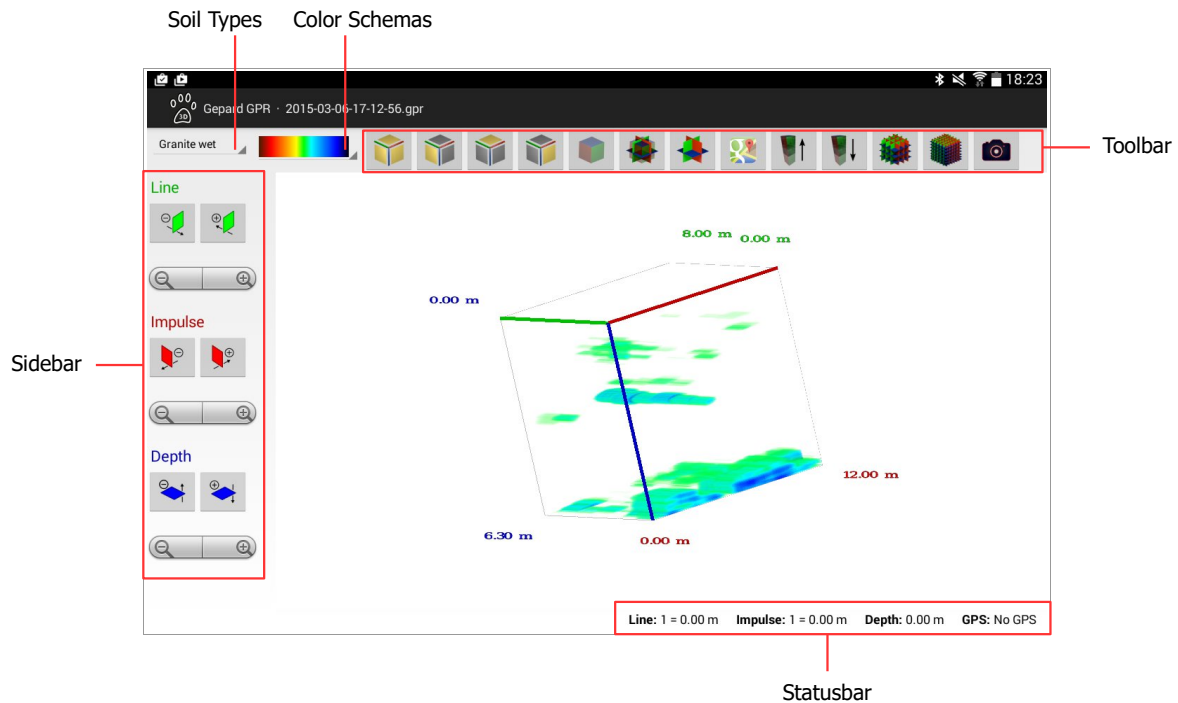


Figure 7.14: Overview of 3D screen

Next to the main viewing area there are some elements to control the rendering of the measurement.

7.2.6.1 Soil Types and Color Schemas

By selecting the correct soil type of your scan area you will get better results concerning the depth measurement. It does not change any visual representation of your graphic.

Switching between different color schemas can sometimes reveal hidden structures because of different contrast and brightness settings. So there is no recommended color schema to use, you always have to find the best solution by yourself.

7.2.6.2 Toolbar

The toolbar is home of several buttons which are explained here:



Perspective View

Set your rotation to a perspective view that you will see your 3d graphic from **front, right and top**.

**Front View**

Set your rotation to a view that you will see your 3d graphic from **front**.

**Top View**

Set your rotation to a view that you will see your 3d graphic from **top**.

**Right View**

Set your rotation to a view that you will see your 3d graphic from **right**.

**3D View**

See your data in a full 3d view.

**3D View / Planes View**

See your data in a 3d view with additional planes as length, width and depth indicators.

**Planes View**

You just see simple planes as length, width and depth indicators. So you can check each scan line or depth level individually.

**Google Maps**

Open a map to see where your current scan was conducted.

**Decrease Transparency**

Make the 3d graphic less transparent and more opaque.

**Increase Transparency**

Make the 3d graphic more transparent and less opaque.

**Low Resolution**

View the 3d graphic with just the data samples conducted during your scan.

**High Resolution**

Add additional samples to your conducted scan to improve the object visibility. This will need much more calculation power of your Tablet PC.



Screenshot

In case you want to save your current view into an image file simply use this button to create a screenshot of your screen.

7.2.6.3 Sidebar

The sidebar contains some buttons to control the 3d crosshairs, which are visible in one of the plane view modes.



Move Line

Move the line marker forth and back to measure the width position (if field dimensions has been set). The line marker is only visible in any plane view mode.



Move Impulse

Move the impulse marker forth and back to measure the length position (if field dimensions has been set). The impulse marker is only visible in any plane view mode.



Move Depth

Move the depth marker forth and back to measure the depth (depends on selected soil type). The depth marker is only visible in any plane view mode.

7.2.6.4 Statusbar

The information from the statusbar are mostly based on the position of the crosshairs. So by changing the crosshairs, the values in the statusbar will also change.

7.3 Activation

When you ordered your Gepard GPR together with an Android Tablet PC, your application is already activated. In the event that you replace the Android Tablet PC, the following instructions explain how to activate the software.

In the very front of the user's manual there is a small notice (leaflet). This notice has the software code for renewing the activation of the software. The leaflet is attached to the inside of the user's manual. Please make a copy of it and keep it in a safe place.

After selecting the option "Activation" from the main menu you will see the activation screen as displayed in figure 7.15.

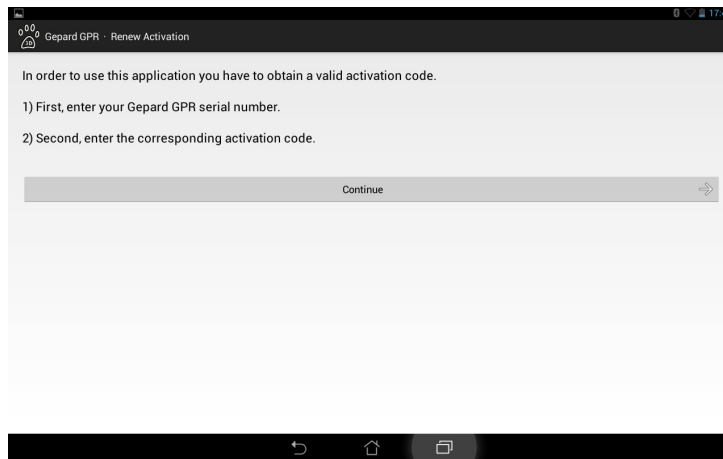


Figure 7.15: Activation – Welcome Screen

After tapping the button "Continue", enter the unit's serial number, as shown in figure 7.16. You will find your serial number on the notice in front of your user's manual as well as on your device itself. After entering the right number click the checkmark button to continue.

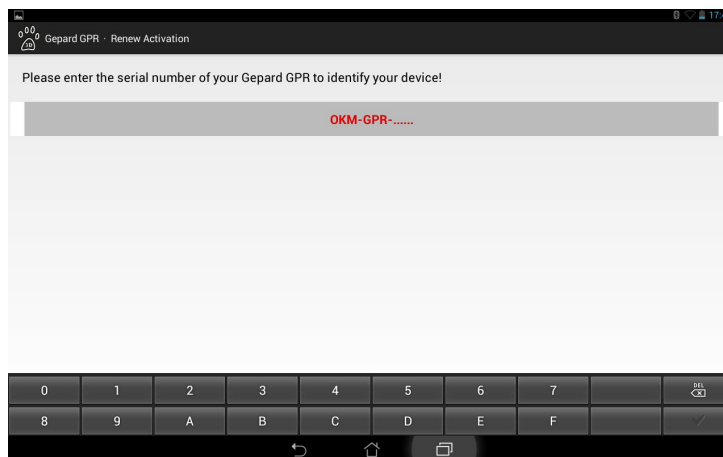


Figure 7.16: Activation – Entering the serial number

In the next step you will be asked to enter the activation code as shown in figure 7.17. This information is also printed in the small leaflet in front of your manual. After entering the activation code click the checkmark button again.

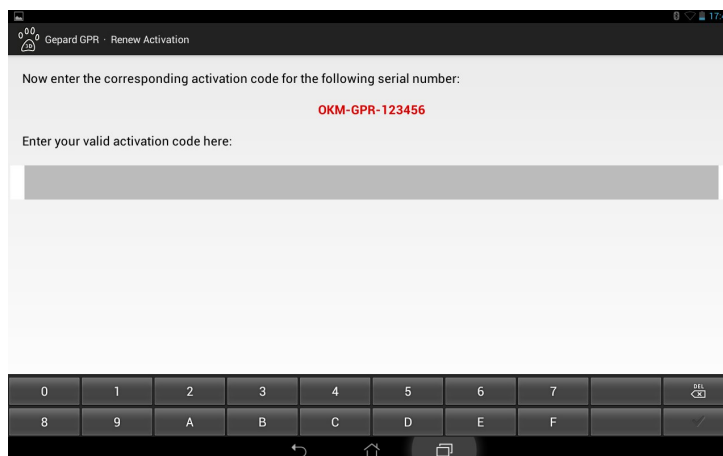


Figure 7.17: Activation – Entering the activation code

Once that is completed and all information are valid you will receive a window stating "Success" and your software is ready to use.

CHAPTER 8

Appendix & References

In this chapter you will find appendices to tables and references used.

8.1 Depth Table Calculations

With varying soil attenuation, the Gepard GPR was calculated with a median frequency value of 100 MHz.¹ Reference material used from DJ Daniels, Institution of Electrical Engineers, Ground Penetrating Radar, 2nd Edition, 1996.

TABLE 5.4
Some Typical Dielectric Characteristics of Materials Measured at 100 MHz

Material	Conductivity, σ (S-m)	Relative Permeability ($\mu_r = \mu/\mu_0$)	Relative Permittivity ($\epsilon_r = \epsilon/\epsilon_0$)	Attenuation, α (dB-m ⁻¹)
Air	0	1	1	0
Asphalt—dry	10 ⁻² – 10 ⁻¹	2–4	2–4	2–15
Asphalt—wet	10 ⁻³ – 10 ⁻¹	6–12	6–12	2–20
Clay—dry	10 ⁻¹ – 10 ⁻⁹	2–6	2–6	10–50
Clay—wet	10 ⁻¹ – 10 ⁻⁹	5–40	5–40	20–100
Coal—dry	10 ⁻³ – 10 ⁻²	3.5	3.5	1–10
Coal—wet	10 ⁻² – 10 ⁻¹	8	8	2–20
Concrete—dry	10 ⁻³ – 10 ⁻²	4–10	4–10	2–12
Concrete—wet	10 ⁻² – 10 ⁻¹	10–20	10–20	10–25
Freshwater	10 ⁻⁶ – 10 ⁻²	81	81	0.01
Freshwater ice	10 ⁻⁴ – 10 ⁻³	4	4	0.1–2
Granite—dry	10 ⁻⁸ – 10 ⁻⁴	5	5	0.5–3
Granite—wet	10 ⁻³ – 10 ⁻²	7	7	2–5
Limestone—dry	10 ⁻⁸ – 10 ⁻⁴	7	7	0.5–10
Limestone—wet	10 ⁻² – 10 ⁻¹	8	8	1–20
Permafrost	10 ⁻⁵ – 10 ⁻²	4–8	4–8	0.1–5
Rock salt—dry	10 ⁻⁴ – 10 ⁻²	4–7	4–7	0.01–1
Sand—dry	10 ⁻⁷ – 10 ⁻³	2–6	10–30	0.01–1
Sand—wet	10 ⁻³ – 10 ⁻²	10–30	2–5	0.5–5
Sandstone—dry	10 ⁻⁶ – 10 ⁻⁵	2–5	5–10	2–10
Sandstone—wet	10 ⁻⁴ – 10 ⁻²	5–10	5–10	4–20
Sea water	10 ²	81	81	100
Sea water ice	10 ⁻² – 10 ⁻¹	4–8	4–8	1–30
Shale—dry	10 ⁻³ – 10 ⁻²	4–9	4–9	1–10
Shale—saturated	10 ⁻³ – 10 ⁻¹	9–16	10–30	5–30
Snow—firm	10 ⁻⁶ – 10 ⁻⁵	6–12	6–12	0.1–2
Soil clay—dry	10 ⁻² – 10 ⁻¹	4–10	4–10	0.3–3
Soil clay—wet	10 ⁻³ – 10 ⁻⁹	10–30	10–30	5–50
Soil loamy—dry	10 ⁻⁴ – 10 ⁻³	4–10	4–10	0.5–3
Soil loamy—wet	10 ⁻² – 10 ⁻¹	10–30	4–10	1–6
Soil sandy—dry	10 ⁻⁴ – 10 ⁻²	4–10	4–10	0.1–2
Soil sandy—wet	10 ⁻² – 10 ⁻¹	10–30	10–30	1–5

Source: Daniels, D.J., *Ground Penetrating Radar*, 2nd ed., Institute of Engineering and Technology, London, UK, 2004.

Figure 8.1: Dielectric reference for various soil attenuation

¹ DJ Daniels, *Ground Penetrating Radar*, 2004